802.11b+g Wireless LAN

USB Adapter

User's Manual

Downloaded from www.Manualslib.com manuals search engine

REGULATORY STATEMENTS

FCC Certification

The United States Federal Communication Commission (FCC) and the Canadian Department of Communications have established certain rules governing the use of electronic equipment.

Part15, Class B

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interface, and

2) This device must accept any interface received, including interface that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

CAUTION:

1) To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.

2) This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

INTRODUCTION 1

FEATURES 1

SOFTWARE INSTALLATION 2

STEP 1: INSTALL THE DRIVER & UTILITY 2

HARDWARE INSTALLATION 5

WINDOWS 2000/XP 5

WINDOWS 98/ME 6

NETWORK CONNECTION 8

IN WINDOWS 98SE/ME 8

IN WINDOWS 2000/XP 11

IP ADDRESS 13

Configuration Utility 14

STATION 16

ACCESS POINT 24

Appendix 30

SOFT AP CONFIGURATION 30

Downloaded from www.Manualslib.com manuals search engine

INTRODUCTION

The **802.11b+g Wireless LAN USB Adapter** is designed for a USB type A port of a laptop or desktop computer for creating a wireless workstation. It is USB 2.0 compliant which connects to any available USB port on a notebook or desktop computer.

The **802.11b+g Wireless LAN USB Adapter** complies with **IEEE 802.11g** standard that offers a data rate up to **54Mbps** in a wireless LAN environment. It is backward compliant with IEEE 802.11b specification. The high-speed wireless network card can plug into your notebook or desktop PC and accesses to the LAN or peer-to-peer networking easily without wires or cables. Whether you're at your desk or in the boardroom, it allows you to share printers, files, and other network resources.

Features

- Complies with IEEE 802.11g standard for 2.4GHz Wireless LAN
- USB 2.0 compliant
- USB Plug & Play
- Interoperable with existing network infrastructure
- Secure information transmission
- Freedom to roam while staying connected
- Compatible with specialty wireless products and services
- Up to 54 Mbps data rate
- Antenna is built in the card with LED indication
- Low power consumption
- Easy to install and configure

Downloaded from www.Manualslib.com manuals search engine

SOFTWARE INSTALLATION

Step 1: Install the Driver & Utility

For Windows 98, 2000, ME and XP users

Caution!

Do not insert the wireless LAN adapter into your computer until the procedures in " Install the Driver& Utility" have been performed.

1. Exit all Windows programs. Insert the included CD-ROM into your computer. The CD-ROM will run automatically.
2. When the Main Menu screen appears, click **" Driver & Utility Installation"** to continue.

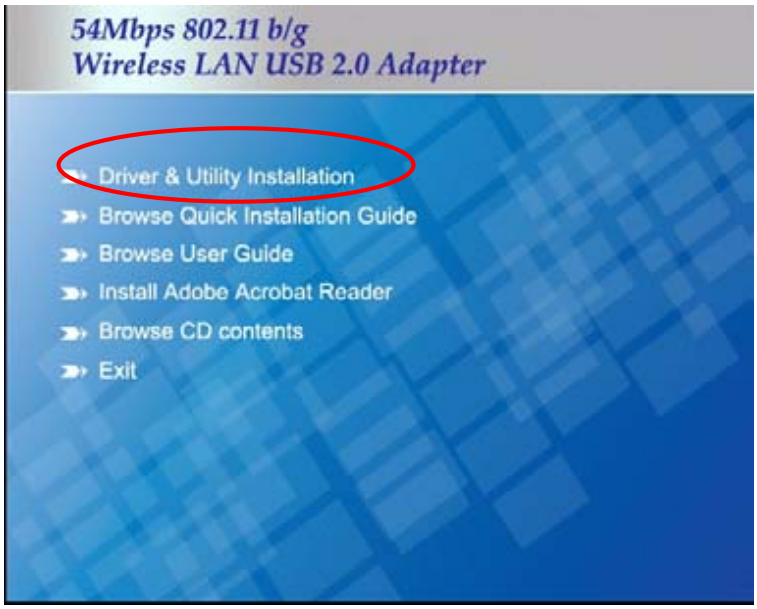

Downloaded from www.Manualslib.com manuals search engine

3. When the Welcome screen appears, click **Next** to continue.

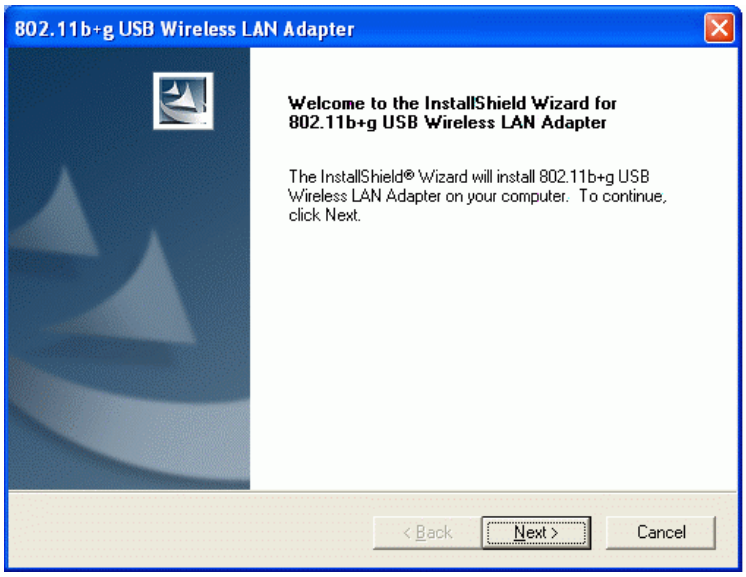
802.11b+g USB Wireless LAN Adapter
Welcome to the InstallShield Wizard for 802.11b+g USB Wireless LAN Adapter
The InstallShield® Wizard will install 802.11b+g USB Wireless LAN Adapter on your computer. To continue, click Next.
< Back
Next >
Cancel

4. The installation program will start running automatically. Follow the on-screen instruction to proceed.

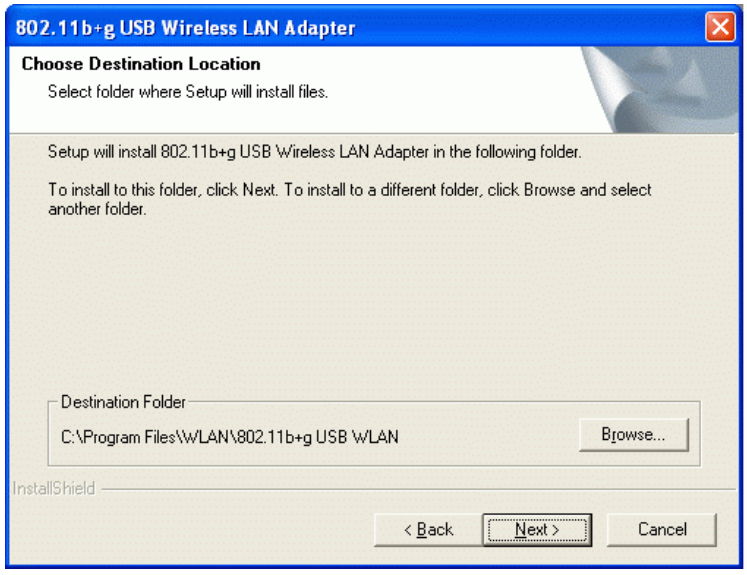
802.11b+g USB Wireless LAN Adapter
Choose Destination Location
Select folder where Setup will install files.
Setup will install 802.11b+g USB Wireless LAN Adapter in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\WLAN\802.11b+g USB WLAN
Browse...
InstallShield
< Back
Next >
Cancel

5. Click **Finish** to complete the software installation.

Downloaded from www.Manualslib.com manuals search engine

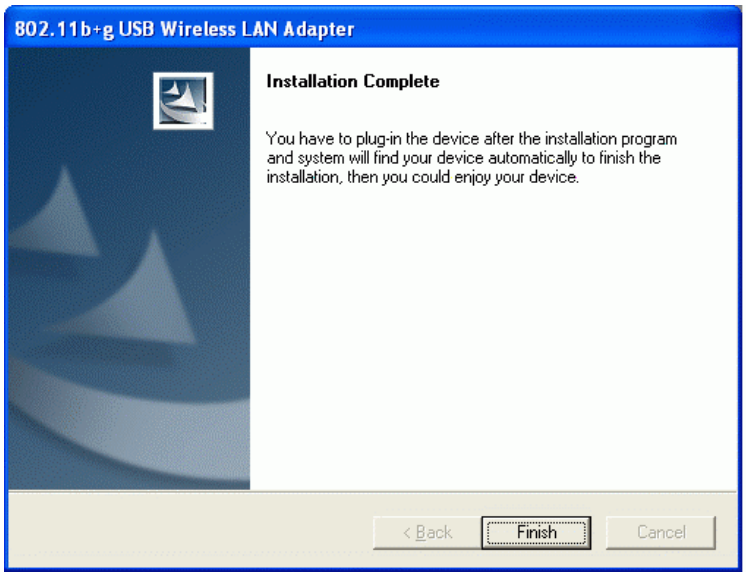
802.11b+g USB Wireless LAN Adapter
Installation Complete
You have to plug-in the device after the installation program and system will find your device automatically to finish the installation, then you could enjoy your device.
< Back
Finish
Cancel

Downloaded from www.Manualslib.com manuals search engine

HARDWARE INSTALLATION

Windows 2000/XP

Note: Before you install the device to your computer, make sure you have installed the **driver** and **utility** as described in the previous section.

Windows XP

1. Locate your USB host and insert the USB Adapter.
2. Once the device has been inserted to your computer, Windows will detect the new hardware.
3. When the following screen appears, select **Install the software automatically (Recommended).**

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
This wizard helps you install software for:
802.11b+g USB Wireless LAN Adapter
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

Downloaded from www.Manualslib.com manuals search engine

4. Click **Continue Anyway** → **Finish** to complete the hardware installation.

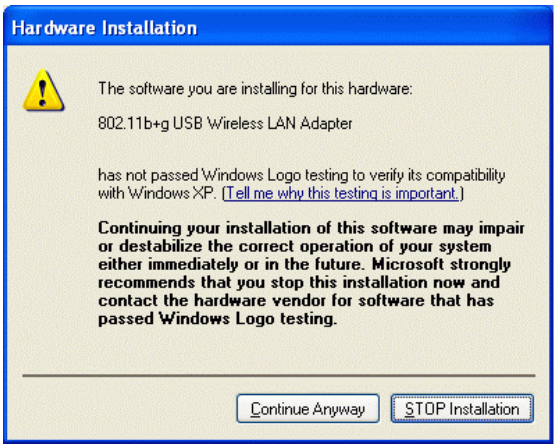
Hardware Installation
The software you are installing for this hardware:
802.11b+g USB Wireless LAN Adapter
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

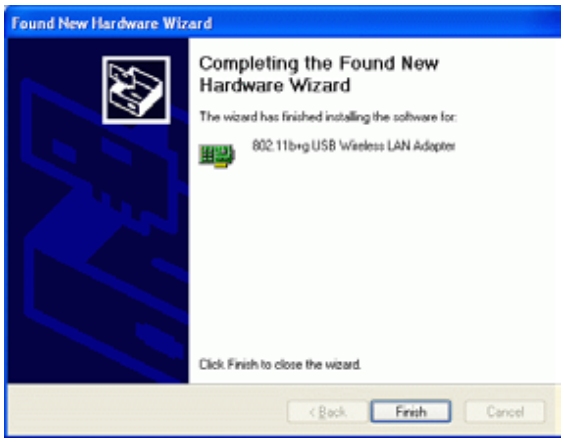
Found New Hardware Wizard
Completing the Found New Hardware Wizard
The wizard has finished installing the software for:
802.11b+g USB Wireless LAN Adapter
Click Finish to close the wizard.
< Back
Finish
Cancel

Windows 2000

Insert the USB adapter into the USB port of your computer and then click **Yes** to complete the hardware installation.

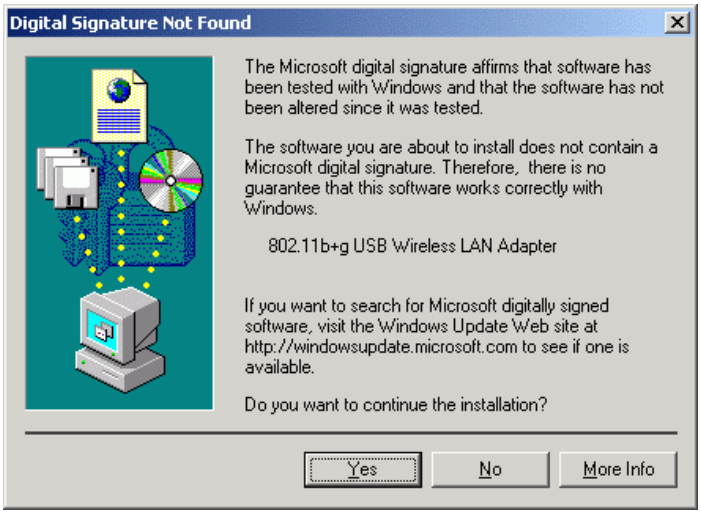
Digital Signature Not Found
The Microsoft digital signature affirms that software has been tested with Windows and that the software has not been altered since it was tested.
The software you are about to install does not contain a Microsoft digital signature. Therefore, there is no guarantee that this software works correctly with Windows.
802.11b+g USB Wireless LAN Adapter
If you want to search for Microsoft digitally signed software, visit the Windows Update Web site at http://windowsupdate.microsoft.com to see if one is available.
Do you want to continue the installation?
Yes
No
More Info

Windows 98/ME

In Window 98/ME, you only have to insert the USB adapter into the USB port of your computer to complete the hardware installation.

Downloaded from www.Manualslib.com manuals search engine

Verify

To verify if the device exists in your computer and is enabled, go to **Start → Settings → Control Panel → System (→ Hardware) → Device Manager**. Expand the **Network Adapters** category. If the **802.11b+g USB Wireless LAN Adapter** is listed here, it means that your device is properly installed and enabled.

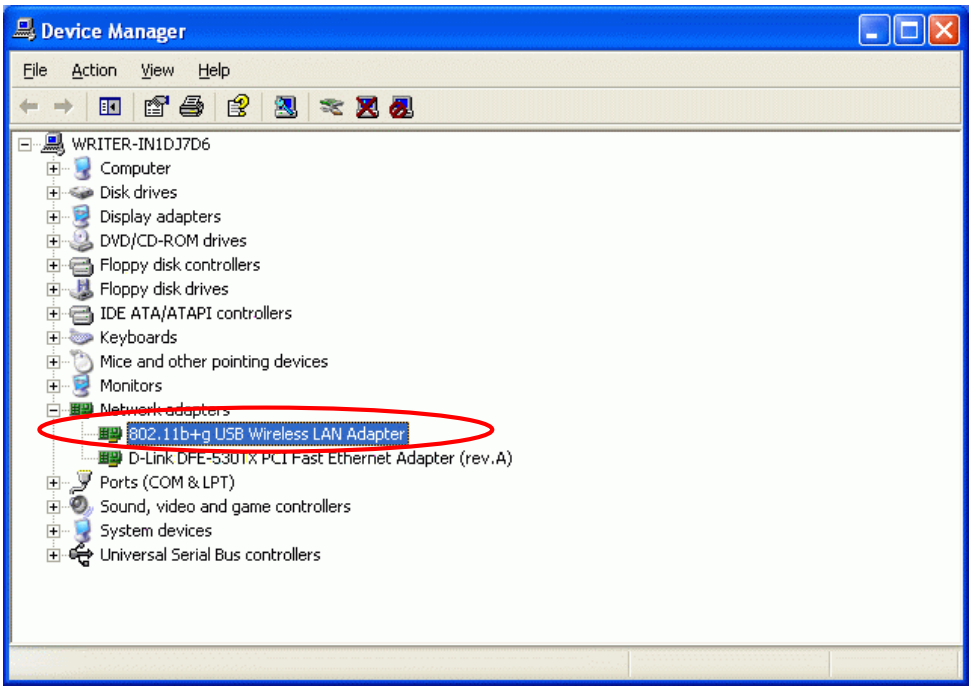

Downloaded from www.Manualslib.com manuals search engine

NETWORK CONNECTION

Once the device driver is well installed, a network setting described in the following should be also established.

In Windows 98SE/ME

1. Go to **Start → Settings → Control Panel → Network**.

2. Make sure that all the required components are installed. If any components are missing, click on the **Add** button to add them in.

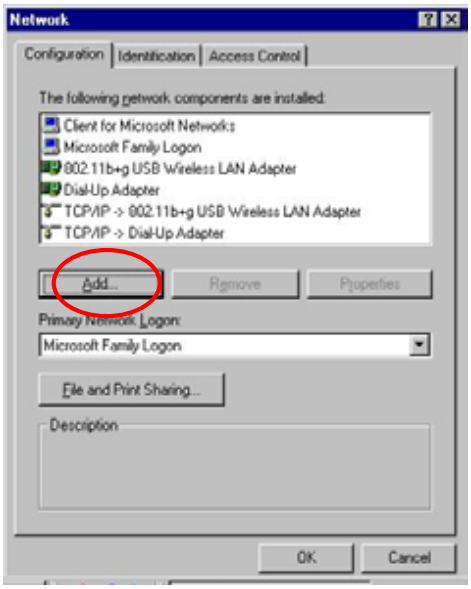

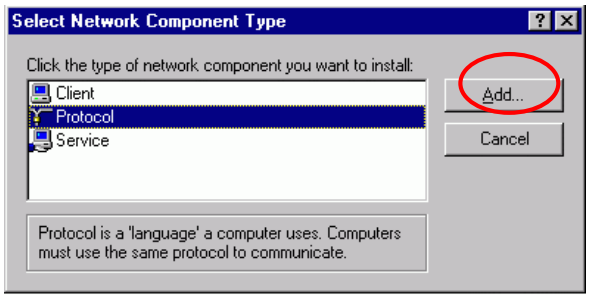
Select Network Component Type
Click the type of network component you want to install:
Client
Protocol
Service
Add...
Cancel
Protocol is a 'language' a computer uses. Computers must use the same protocol to communicate.

Downloaded from www.Manualslib.com manuals search engine

3. For making your computer visible on the network, enable the **File and Print Sharing**.

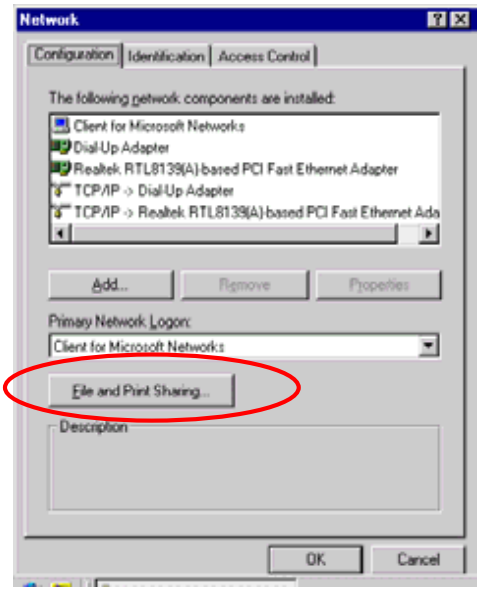

4. Click the **Identification** tab. Make up a name that is unique from the other computers' names on the network. Type the name of your workgroup, which should be the same used by all of the other PCs on the network.

Downloaded from www.Manualslib.com manuals search engine

5. Click the **Access Control** tab. Make sure that "**Share-level access control**" is selected. If connecting to a Netware server, share level can be set to "**User-level access control**."

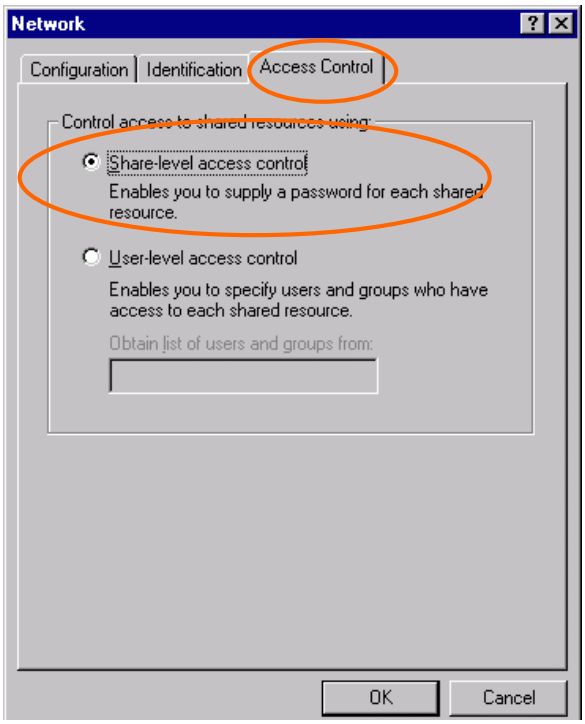
Network
Configuration
Identification
Access Control
Control access to shared resources using:
Share-level access control
Enables you to supply a password for each shared resource.
User-level access control
Enables you to specify users and groups who have access to each shared resource.
Obtain list of users and groups from:
OK
Cancel

6. When finished, restart your computer to activate the new device.

Downloaded from www.Manualslib.com manuals search engine

In Windows 2000/XP

1. (In **Windows 2000**)

   Go to **Start→ Settings → Control Panel → Network and Dial-up Connections → Local Area Connection → Properties**.

   (In **Windows XP**)
   Go to **Start → Control Panel → Network and Internet Connections → Network Connection → Wireless Network Connection Enabled USB Wireless Network Adapter.**

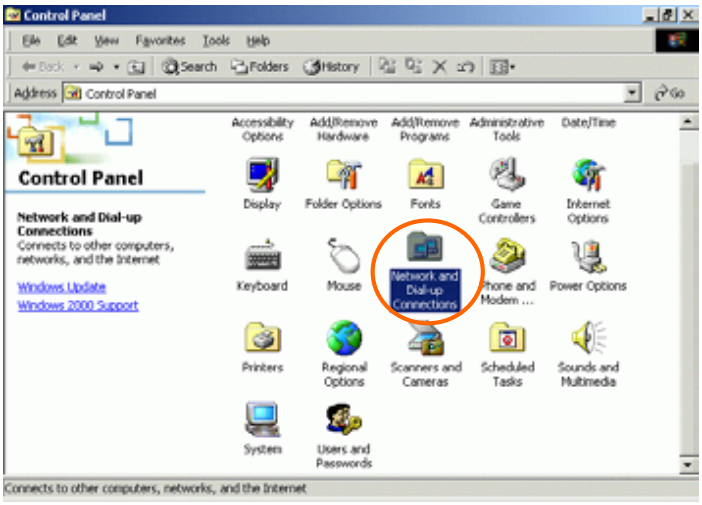

Downloaded from www.Manualslib.com manuals search engine

2. Make sure that all the required components are installed.

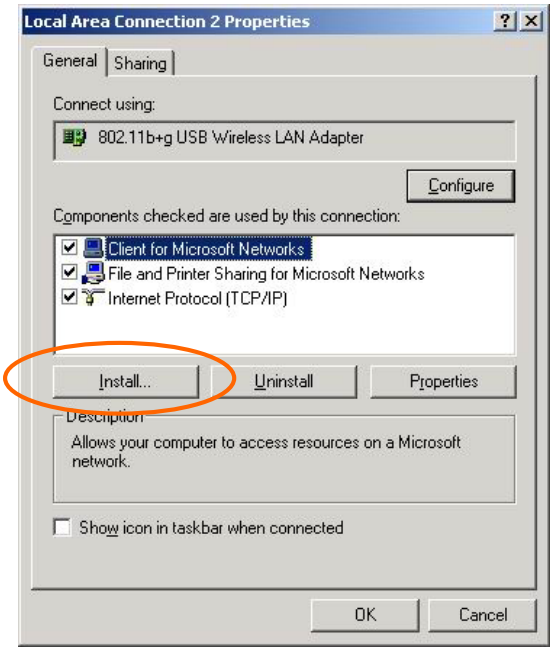

3. If any components are missing, click on the **Install…** button to select the **Client/Service/Protocol** required. After selecting the component you need, click **Add…** to add it in.

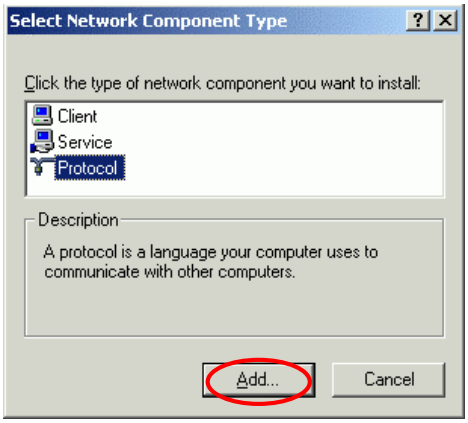

4. For making your computer visible on the network, make sure you have installed **File and Printer Sharing for Microsoft Networks**.

Downloaded from www.Manualslib.com manuals search engine

IP Address

***Note**: When assigning IP Addresses to the computers on the network, remember to have the IP address for each computer set on the same subnet mask. If your Broadband Router use DHCP technology, however, it won't be necessary for you to assign Static IP Address for your computer.*

1. To configure a dynamic IP address (i.e. if your broadband Router has the DHCP technology), check the **Obtain an IP Address Automatically** option.
2. To configure a fixed IP address (if you broadband Router is not DHCP supported, or when you need to assign a static IP address), check the **Use the following IP address** option. Then, enter an IP address into the empty field, for example, enter ***192.168.1.1*** in the IP address field, and ***255.255.255.0*** for the Subnet Mask.

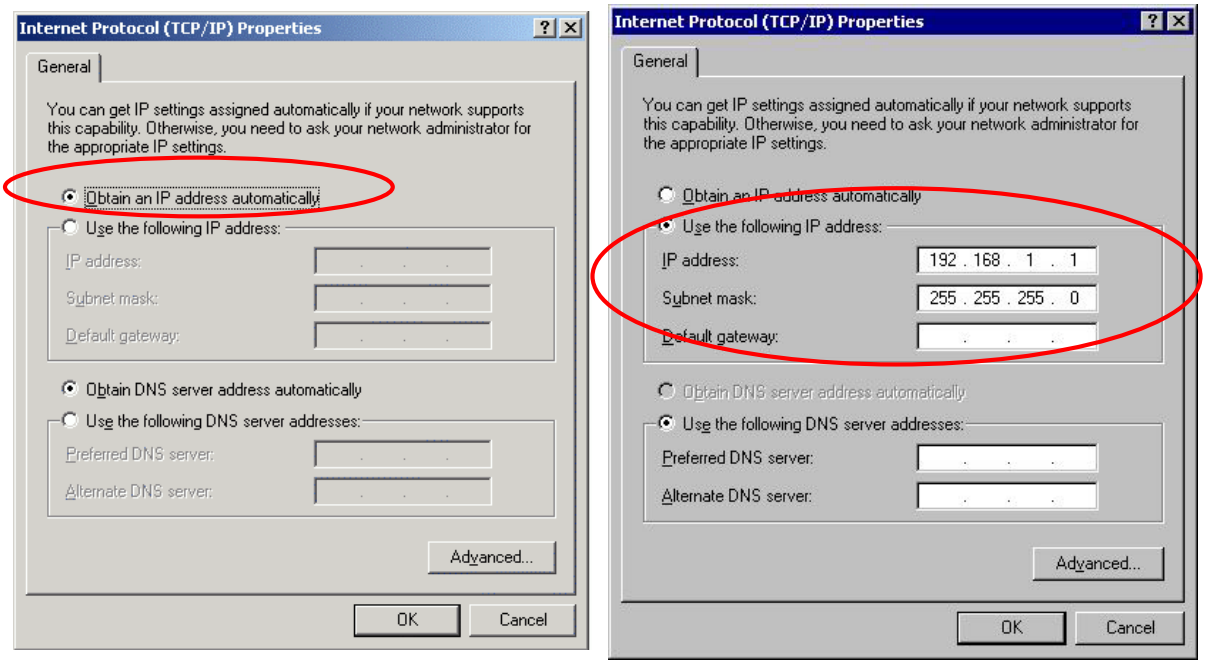
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 1 . 1
Subnet mask: 255 . 255 . 255 . 0
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

Downloaded from www.Manualslib.com manuals search engine

Configuration Utility

After the Wireless adapter has been successfully installed, users can use the included Configuration Utility to set their preference.

Go to **Start→ Program→802.11b+g Wireless LAN → 802.11b+g USB Wireless LAN Utility**

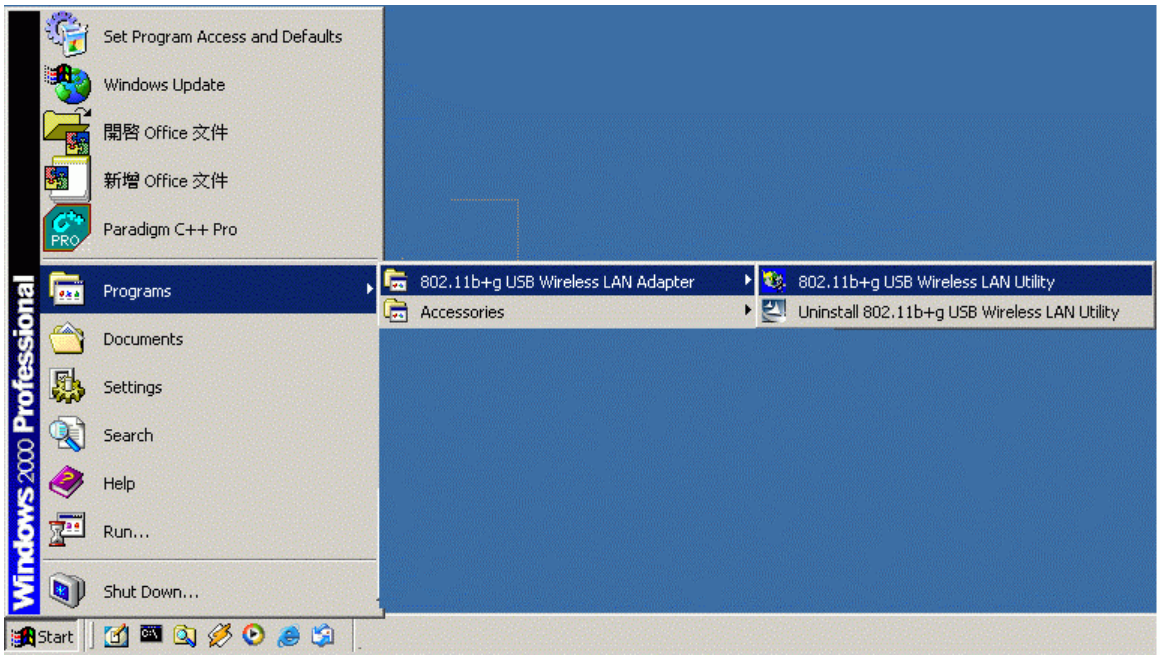

For **Windows 2000/XP**, the Configuration Utility icon will also appear in the taskbar. You can open the Configuration Utility by clicking the icon.

Downloaded from www.Manualslib.com manuals search engine

Note: There will be two modes – **Station** and **Access Point** for you to

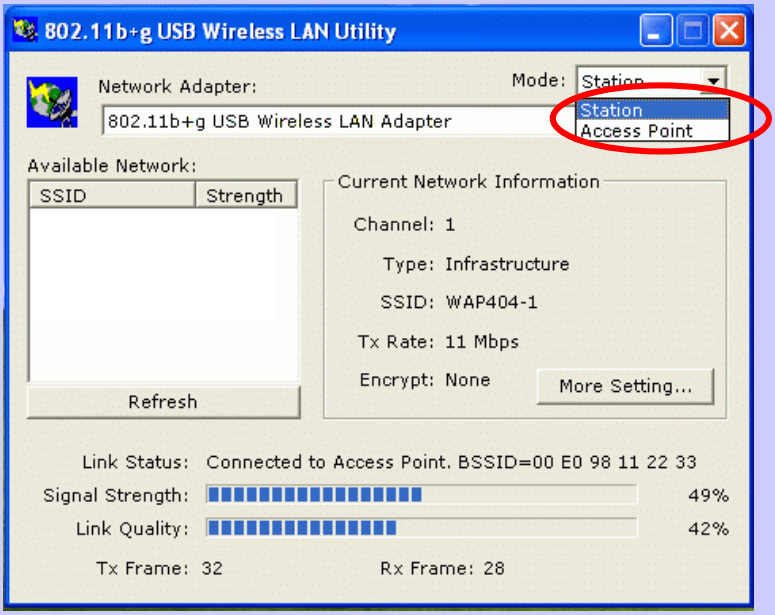

Downloaded from www.Manualslib.com manuals search engine

Station

Select **Station** mode, and you will see the following figure.

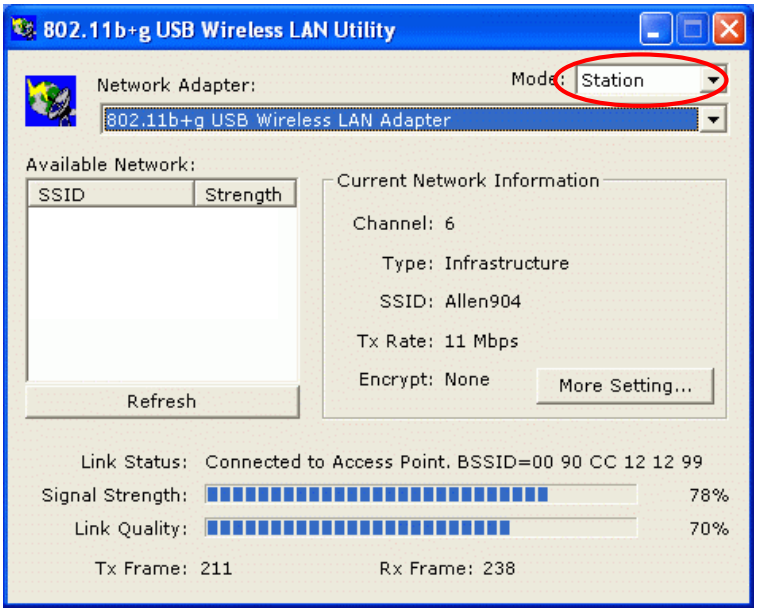

Channel	Shows the selected channel that is currently in use. (There are 14 channels available, depending on the country.)
Type	The **infrastructure** is intended for the connection between wireless network cards and an Access Point. With the wireless adapter, you can connect wireless LAN to a wired global network via an **Access Point** The **Ad-hoc** lets you set a small wireless workgroup easily and quickly. Equipped with the wireless adapter, you can share files and printers between each PC and laptop.
SSID	The **SSID** is the unique name shared among all points in your wireless network. The name must be identical for all devices and points attempting to connect to the same network. It shows the current SSID setting of the Wireless USB Adapter.

Downloaded from www.Manualslib.com manuals search engine

Tx Rate	Click the down arrow ▼ to select the Tx Rate from **Auto**, **1, 2, 5.5, 11, 6, 9, 12, 18, 24, 36, 48, 54 Mbps**, you can select up to **54 Mbps.**
Encrypt	WEP is a data privacy mechanism based on a 64-bit/128-bit shared key algorithm.
More Setting…	Click the **More Setting** button to configure, see the following figure (Refer to the More Setting part on the next page for more information about this figure)： 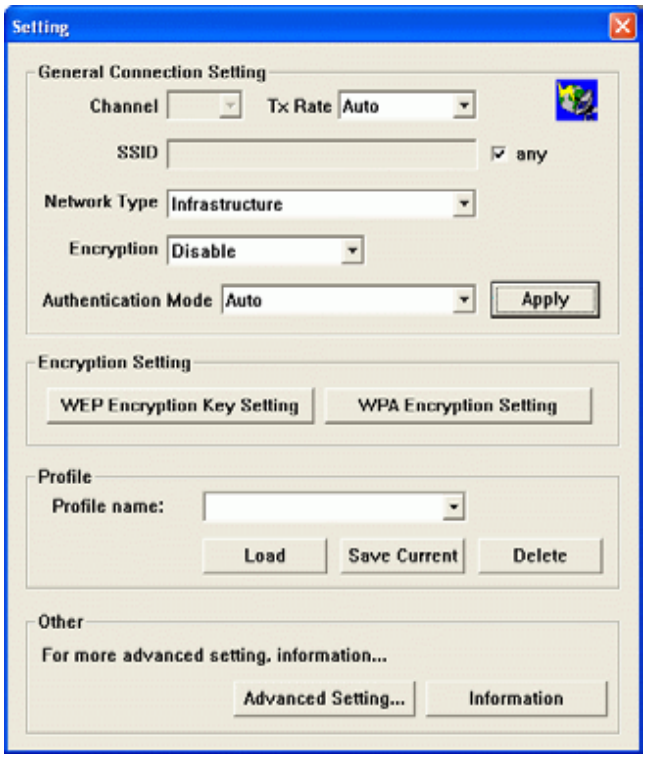
Link Status	Displays the information about the status of the communication between the Wireless USB Adapter and the Access Point.
Signal Strength	Displays the signal strength of the connection between the Wireless USB Adapter and the Access Point it connects.
Link Quality	Displays the link quality of the connection between the Wireless USB Adapter and the Access Point it connects.

Downloaded from www.Manualslib.com manuals search engine

Tx Frame	The quantities for the wireless network card transmit. (Frame: The unit of packet)
Rx Frame	The quantities for the wireless network card receive. (Frame: The unit of packet)

More Setting…

Channel	The Channel will change automatically according to AP's setting.
Tx Rate	Click the down arrow ▼ to select the Tx Rate from **Auto**, **1, 2, 5.5, 11, 6, 9, 12, 18, 24, 36, 48, 54 Mbps**, you can select up to **54 Mbps.**
SSID	The **SSID** is the unique name shared among all points in your wireless network. The name must be identical for all devices and points attempting to connect to the same network.
Any	You may select to have **SSID** by choosing **any,** the SSID will be obtained automatically from whichever Access Point with the optimal signal for this device. If **any** is left unchecked, it means you will have to enter the SSID manually.

Downloaded from www.Manualslib.com manuals search engine

Network Type	The **infrastructure** is intended for the connection between wireless network cards and an Access Point. With the wireless adapter, you can connect wireless LAN to a wired global network via an **Access Point** The **Ad-hoc** lets you set a small wireless workgroup easily and quickly. Equipped with the wireless adapter, you can share files and printers between each PC and laptop.
Encryption	You can only set your Security preference when **Change** is selected and then all fields are active for change. To save settings, press **Apply** when you are done with the settings. Select from the pull-down menu, there are four options including **Disable**, **WEP**, **TKIP** and **AES**.
Authentication Mode	You can select the Authentication Mode from the pull-down men, including **Auto, Open System, Shared Key, WPA and WPA PSK**.
Encryption Setting	**WEP Encryption Setting** **WPA Encryption Setting**： 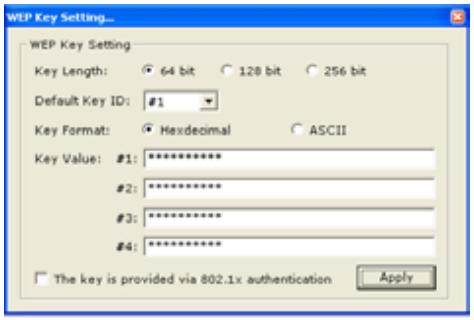 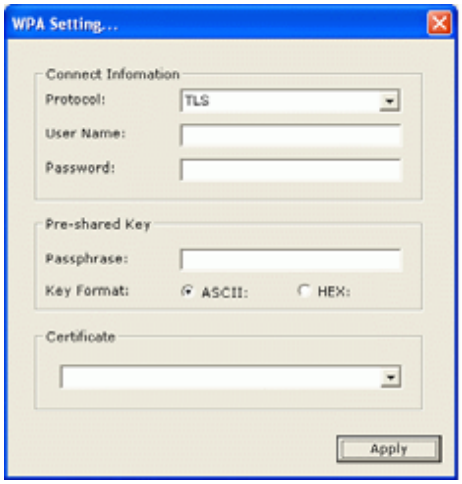 You can only set your Security preference when **Change** is selected and then all fields are active for change. To save settings, press **Apply** when you are done with the settings. **WEP Encryption Setting** **Key length** ： You may select the key length between **64 (bit), 128 (bit)** and **256 (bit)**.

Downloaded from www.Manualslib.com manuals search engine

Default Key ID：You can set your default key ID at #1~#4.
Key Format：Select **Hexadecimal** if you are using hexadecimal numbers (**0-9, or A-F**).
Select **ASCII** if you are using ASCII characters (**case-sensitive**).
10 hexadecimal digits or **5 ASCII characters** are needed if **64-bit WEP** is used; **26 hexadecimal digits** or **13 ASCII characters** are needed if **128-bitWEP** is used；**58 hexadecimal digits** or **29 ASCII characters** are needed if **256-bitWEP** is used.

Key Value:
#1~#4 This setting is the configuration key used in accessing the wireless network via WEP encryption. You can specify up to 4 different keys to *encrypt* or *decrypt* wireless data.
☐ **The Key is provided via 802.1x authentication**：
Please query your network manager about the currently used security protocol, if 802.1x authentication is currently used, then you can check this item to enable 802.1x security protocol. The key value will be configured automatically, just click **Apply** to take effect.

WPA Encryption Setting

Protocol：This panel enables you to select an authentication protocol.
User Name：Type in the user name assigned to the certificate.
Password：This panel is available when EAP-TLS is not selected (either MSCHAP V2 over PEAP is selected with WEP or LEAP is selected for CCX). This panel enables you to enter a login name and password or request that the driver prompt for them when you connect to a network.
Passphrase：Enter the key that you are sharing with the network for the WLAN connection.

Key Format：Select **Hex** if you are using hexadecimal numbers (**0-9, or A-F**).

Select **ASCII** if you are using ASCII characters.

Downloaded from www.Manualslib.com manuals search engine

	Certificate：Please query your network manager about the certificate, select the same certificate as the certification server.
Load	You may select already saved file from the **"Profile name"** list, and then press **"Load "**. The setting status will then be restored.
Save Current	You may save current setting to profile and add one new item in **"Profile name"**.
Delete	Delete the files in the "**Profile name**"
Advanced Setting	Click the **Advanced Setting** button to configure the following figure （Refer to the **Advanced Setting** part on the next page to see more information about the **Advanced Setting**）： 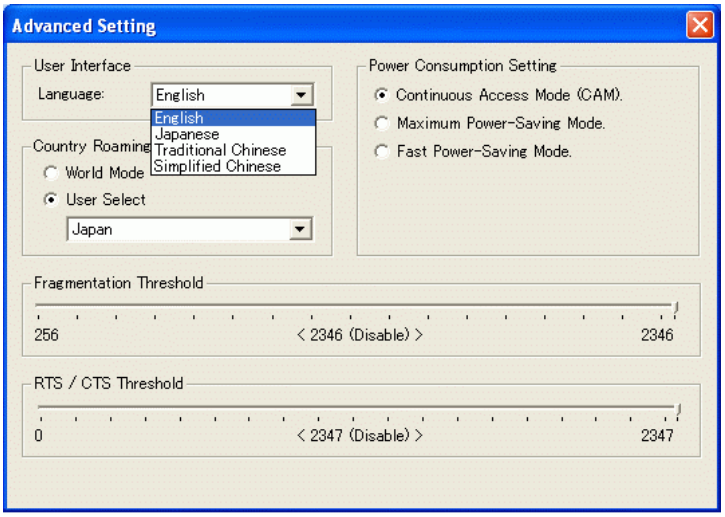
Information	Click the Information button to show the Driver Version, Utility Version and MAC Address of the system. 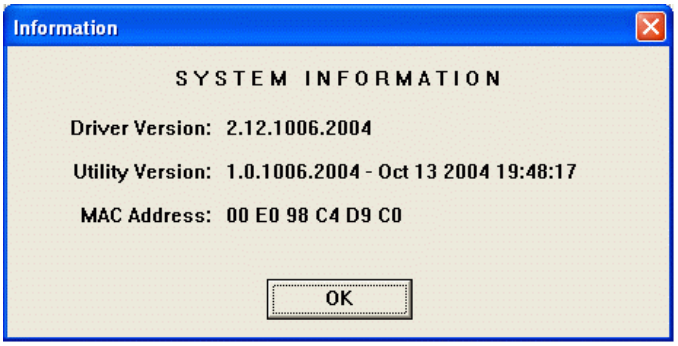

Downloaded from www.Manualslib.com manuals search engine

Advanced Setting

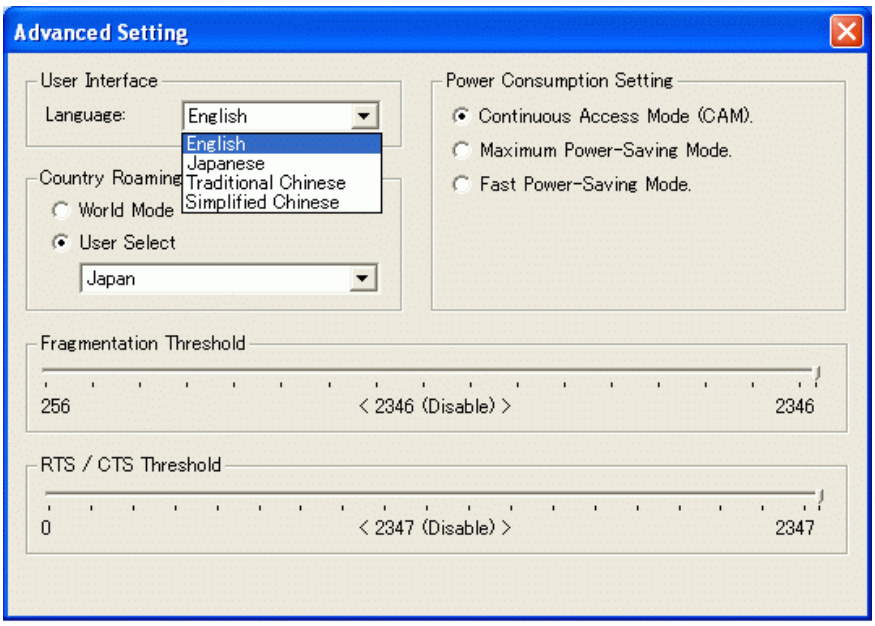

User Interface

Language	Select English or Traditional Chinese.

Power Consumption Setting

Continuous Access Mode (CAM)	When this mode is selected, the power supply will be normally provided even when there is no throughput.
Maximum Power-Saving Mode	When this mode is selected, this device will stay in power saving mode even when there is high volume of throughput.
Fast Power-Saving Mode	When this mode is selected, the power mode will switch between CAM and Maximum Power-Saving Mode depending on the volume of throughput. The device driver checks the total bytes (only data frame) every 4 seconds to decide the power mode. If the total bytes sent exceed 10k bytes, the device driver will choose “CAM”. If the total bytes are less than 10k bytes, however, the device driver will choose “Maximum Power-Saving Mode”.

Downloaded from www.Manualslib.com manuals search engine

Country Roaming

World Mode	This function is only enabled and effective with 802.11d standard.
User Select	Enable this function to select the country you are now locating.

Fragmentation Threshold	The mechanism of Fragmentation Threshold is used to improve the efficiency when high traffic flows along in the wireless network. If your 802. Wireless LAN Adapter often transmit large files in wireless network, you can enter new Fragment Threshold value to split the packet. The value can be set from 256 to 2346. The default value is **2346**.
RTS/CTS Threshold	RTS/CTS Threshold is a mechanism implemented to prevent the "**Hidden Node**" problem. If the "Hidden Node" problem is an issue, users have to specify the packet size. *The RTS/CTS mechanism will be activated if the data size exceeds the value you set.*. The default value is **2347**. This value should remain at its default setting of **2347**. Should you encounter inconsistent data flow, only minor modifications of this value are recommended.

Downloaded from www.Manualslib.com manuals search engine

Access Point

To set your 802.11g Wireless LAN USB Adapter as an Access Point (AP). In access point mode, the **802.11g Wireless LAN USB Adapter** will function as an access point. This allows you to set up your wireless networks without using a dedicated AP device. Up to 16 wireless stations can associate to the **802.11g Wireless LAN USB Adapter.**

To the **802.11g Wireless LAN USB Adapter** to bridge your wired and wireless network, the following requirements must be met：

1. The **802.11g Wireless LAN USB Adapter** must be installed on a computer connected to the wired network.
2. Either configure network sharing (refer to the appendix for an example) or bridge the two interfaces (wireless and wired) on the computer.
3. Set the wireless station's IP address to be in the same subnet as the computer in which the **802.11g Wireless LAN USB Adapter** is installed. Refer to **Configuring the Wireless Station Computer**.

Select the Access Point mode, and you will see the following figure.

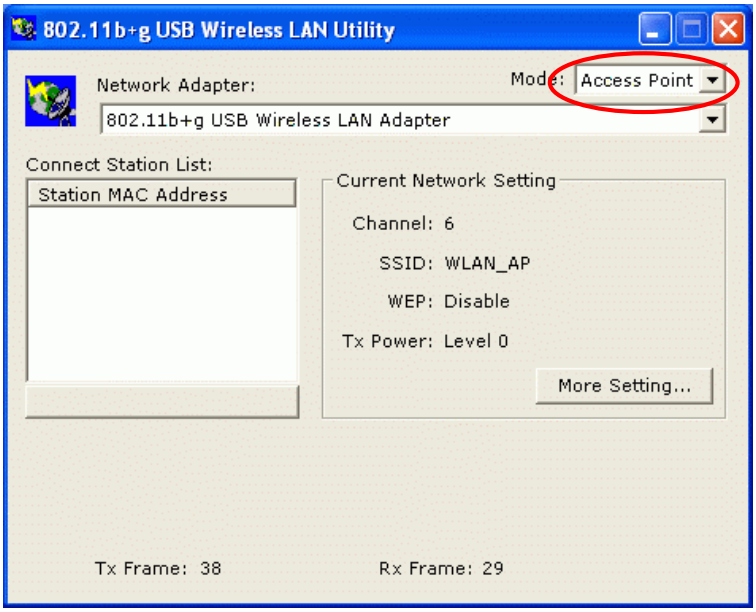

Downloaded from www.Manualslib.com manuals search engine

Network Adapter	You can select the network adapter from the pull-down menu, it shows the device itself（the 802.11g Wireless LAN USB Adapter） and also shows the devices supported by the 802.11g Wireless LAN USB Adapter.
Connection Station List	It shows the stations which are now connecting to the AP.
Channel	Shows the selected channel that is currently in use. (There are 14 channels available, depending on the country.)
SSID	The **SSID** is the unique name shared among all points in your wireless network. The name must be identical for all devices and points attempting to connect to the same network. It shows the current SSID setting of the Wireless USB Adapter.
WEP	The WEP function here has been disabled. If you want to change to Enabled, click **More Setting…** to configure.
Tx Power	The Tx power here is configured as Level 0, to change the Tx power, click **More Setting…** to configure.
More Setting…	Click the **More Setting…** button and the following figure will appear for you to configure（Refer to the **More Setting…** part on the next page for more information about this figure.）

Downloaded from www.Manualslib.com manuals search engine

	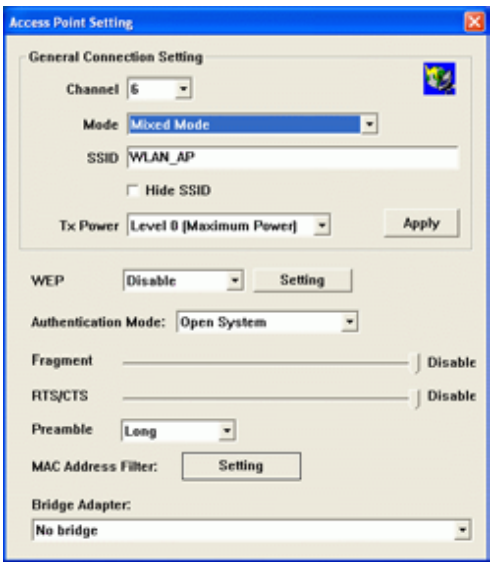
Tx Frame	The quantities for the wireless network card transmit. (Frame: The unit of packet)
Rx Frame	The quantities for the wireless network card receive. (Frame: The unit of packet)

More Setting…

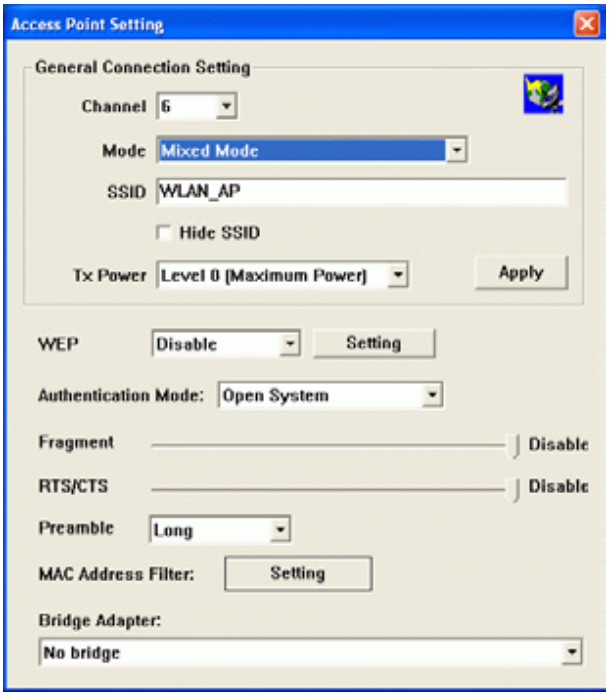

Downloaded from www.Manualslib.com manuals search engine

Channel	Shows the selected channel that is currently in use. (There are 14 channels available, depending on the country.)
Mode	Select **Mixed Mode** or **802.11b only**, **802.11g only** standard Mode (If you choose this option the device will automatically convert the suitable standard).
SSID	The **SSID** is the unique name shared among all points in your wireless network. The name must be identical for all devices and points attempting to connect to the same network. It shows the current SSID setting of the Wireless USB Adapter.
Tx Power	Select the Tx power from the pull-down menu, there are four levels including **Level 1, Level 2, Level 3 (Minimum).**
Change or Apply	Click Change to set the General Connection Setting. After Completing the setting Click Apply.
WEP	You can select to **Enable** or **Disable** the WEP function by selecting from the pull-down men. Click Setting and the following figure will appear. 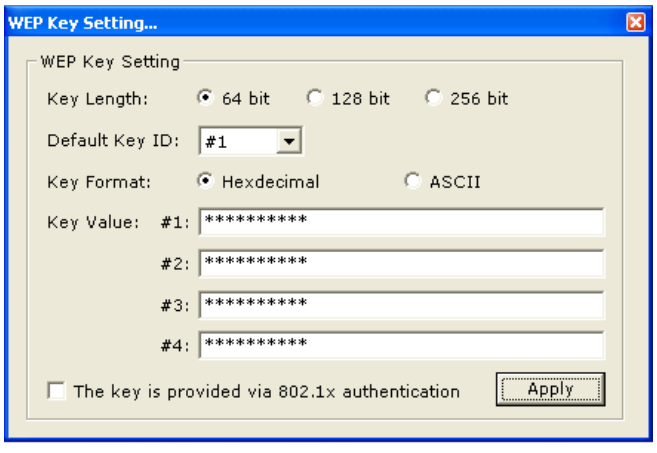

Downloaded from www.Manualslib.com manuals search engine

Authentication Mode	Select the Authentication mode from the pull-down menu, there are two modes for you to choose, **Open System** and **Shared Key**.
Fragment	The mechanism of Fragmentation Threshold is used to improve the efficiency when high traffic flows along in the wireless network. If your 802. Wireless LAN Adapter often transmit large files in wireless network, you can enter new Fragment Threshold value to split the packet. The value can be set from 256 to 2346. The default value is **2346**.
RTS/CTS	RTS/CTS Threshold is a mechanism implemented to prevent the "**Hidden Node**" problem. If the "Hidden Node" problem is an issue, users have to specify the packet size. *The RTS/CTS mechanism will be activated if the data size exceeds the value you set.*. The default value is **2347**. This value should remain at its default setting of **2347**. Should you encounter inconsistent data flow, only minor modifications of this value are recommended.
Preamble	A preamble is a signal used in wireless environment to synchronize the transmitting timing including Synchronization and Start frame delimiter. Select from the pull-down menu to change the Preamble type into **Long** or **Short**.

Downloaded from www.Manualslib.com manuals search engine

MAC Address Filter	Click **Setting** and you will see the following figure. You can select the Filter Type from the pull-down menu. **Disable**：Select to disable the filter function. **Accept**：You can type in 15 MAC addresses by clicking **Change**. If you select Accept, then the MAC address(es) you type in will be connected to the AP. **Reject**：You can type in 15 MAC addresses by clicking Change. If you select Reject, then the MAC address(es) you type in will not be connected to the AP. 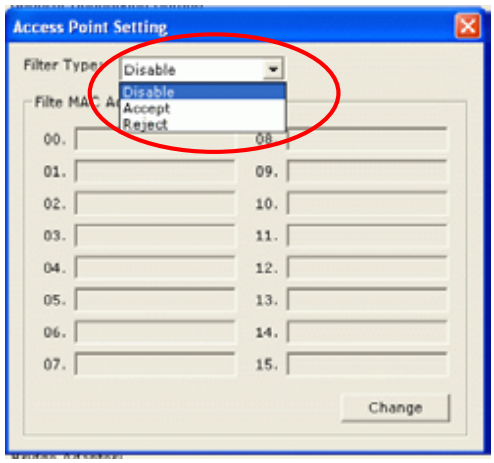
Bridge Adapter	The stations will not be allowed to connect to the internet if you select **No bridge**. The stations will be allowed to connect to the internet if you select the device listed in the pull-down menu.

Downloaded from www.Manualslib.com manuals search engine

Appendix

Soft AP Configuration

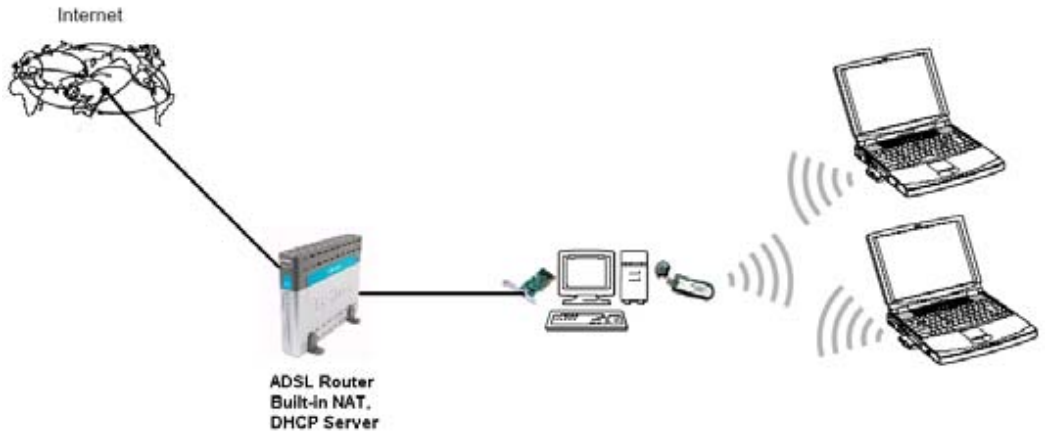

Setup Requirement:

To bridge your wired and wireless network using 802.11b+g Wireless LAN USB Adapter, the following must be met:

1. Install the 802.11b+g Wireless LAN USB Adapter on the LAN-connected computer.
2. The Soft Access Point should be connected to a network switch, hub or a Broadband Router. Use a standard Category 5 UTP Ethernet cable with an RJ-45 connector to connect the Soft Access Point to one of router, hub, or switch.
3. The computer that you are installing the wireless card into has an Ethernet connection, and is connected to a LAN with a DHCP server.

SoftAP Configuration：

Downloaded from www.Manualslib.com manuals search engine

1. Select the Access Point mode, and you will see the following figure

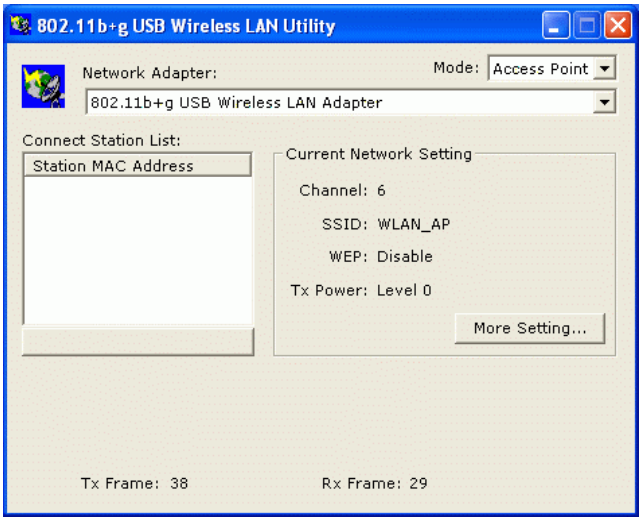

2. Click the **More Setting…** button and the following figure will appear for you to configure

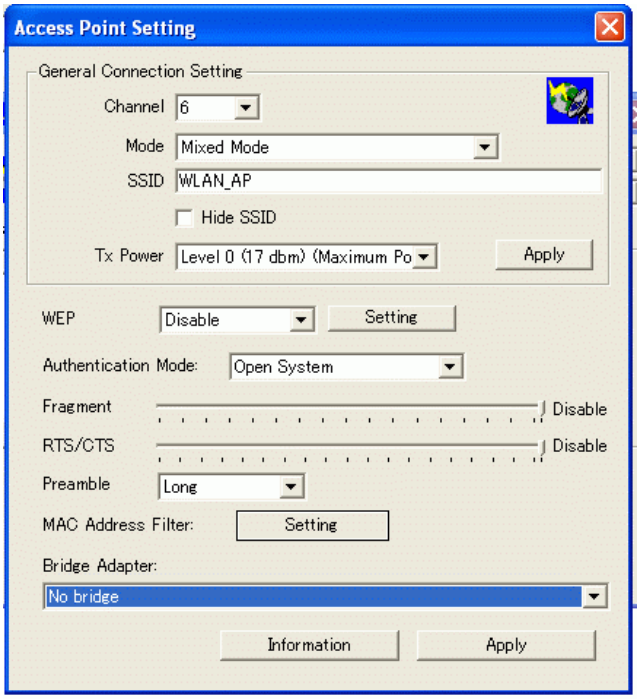

3. Select the wired Network Adapter that has already installed in the PC from the pull-down menu.

Downloaded from www.Manualslib.com manuals search engine

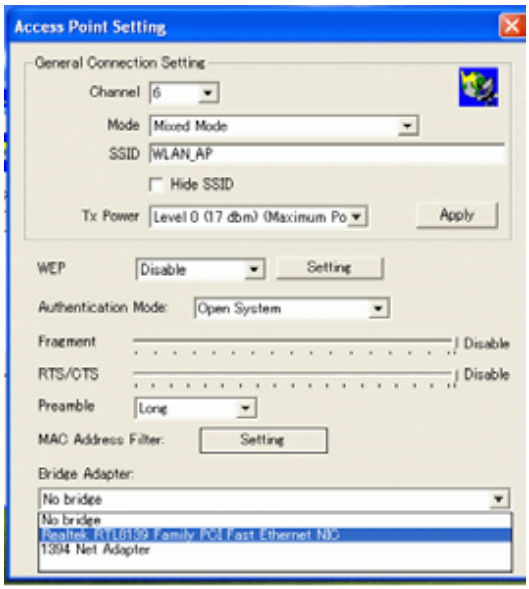

4. If the network connected to the wired LAN card has a DHCP server, you just need to configure the wireless station as a DHCP client (select **Obtain an IP address automatically**). If the network does not have a DHCP server, you must assign a fixed IP to the wired PC (select Use the following IP address).

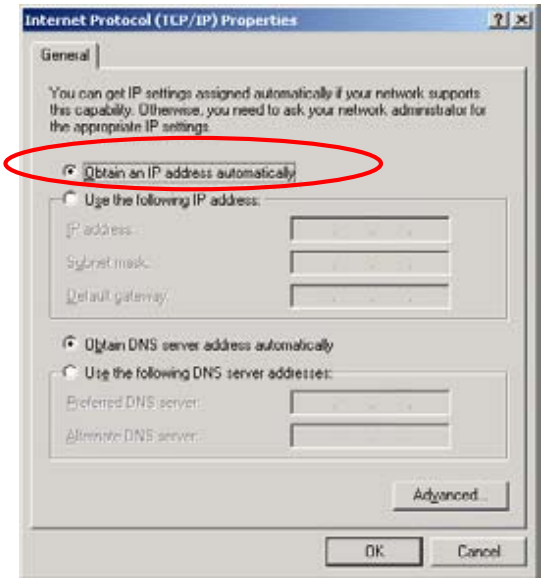
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

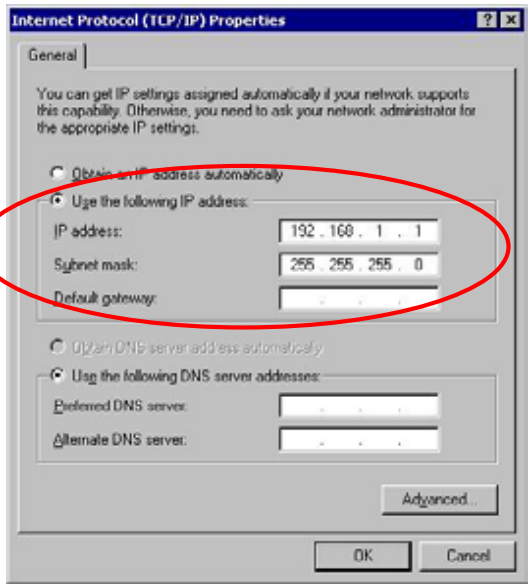
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Use the following IP address:
IP address: 192 . 168 . 1 . 1
Subnet mask: 255 . 255 . 255 . 0
Default gateway:
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

Downloaded from www.Manualslib.com manuals search engine